



**WHITE-RODGERS**

**1F94W-71**

Multi-stage Electronic Digital Thermostat


**INSTALLATION INSTRUCTIONS**

**Operator: Save these instructions for future use!**

**FAILURE TO READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR OPERATING THIS CONTROL COULD CAUSE PERSONAL INJURY AND/OR PROPERTY DAMAGE.**

**DESCRIPTION**

This wall-mounted, low voltage thermostat maintains room temperature by controlling the operation of multi-stage systems. Use this thermostat for applications requiring up to three stages of heat and up to two stages of cool. Indicator lights show the system status. The user may program up to four time/temperature settings per 24 hour period. The thermostat stores programs for seven independent days. The thermostat will store both heating and cooling programs simultaneously. A 9 volt Energizer® battery will maintain the stored program for approximately one week, if incoming power should fail. If power failure is extensive and the program is lost, after power restoration, the thermostat will automatically maintain a factory preprogrammed heating temperature of 64°F or a cooling temperature of 82°F.

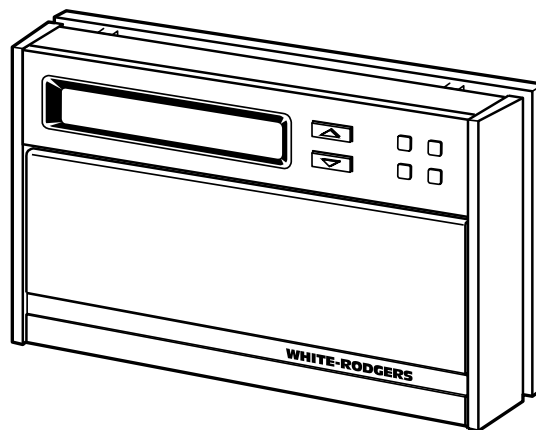

**PRECAUTIONS**

If in doubt about whether your wiring is millivolt, line, or low voltage, have it inspected by a qualified heating and air conditioning contractor, electrician, or someone familiar with basic electricity and wiring.  
Do not exceed the specification ratings.

All wiring must conform to local and national electrical codes and ordinances.

This control is a precision instrument, and should be handled carefully. Rough handling or distorting components could cause the control to malfunction.

**CONTENTS**

Description .....	1
Precautions .....	1
Specifications .....	2
Installation .....	2
New Installation	
Select Thermostat Location	
Route Wires to Location	
Replacement Installation	
Remove Old Thermostat	
Attach Subbase to Wall	
Attach Thermostat to Subbase	
Operation .....	5
System Configuration	
Set Option Switches	
Check Thermostat Operation	
Fan Operation	
Heating System Operation	
Cooling System Operation	
Troubleshooting	

**⚠ CAUTION**

**To prevent electrical shock and/or equipment damage, disconnect electric power to system, at main fuse or circuit breaker box, until installation is complete.**

**⚠ WARNING**

**Do not use on circuits exceeding specified voltage. Higher voltage will damage control and could cause shock or fire hazard.**

**Do not short out terminals on gas valve or primary control to test. Short or incorrect wiring will burn out thermostat and could cause personal injury and/or property damage.**



**WHITE-RODGERS DIVISION**  
EMERSON ELECTRIC CO.  
9797 REAVIS ROAD  
ST. LOUIS, MISSOURI 63123-5398

Printed in U.S.A.

**PART NO. 37-5524A**

9529

# SPECIFICATIONS

**THIS CONTROL IS DESIGNED FOR USE WHERE BOTH SIDES OF THE TRANSFORMER ARE PRESENT TO THE THERMOSTAT** (both the hot and common sides of the 24 VAC end of the transformer.)

## ELECTRICAL DATA

### Electrical Rating:

20 to 30 VAC 50/60 Hz.

0.01 to 1.5 Amps (Load per terminal)

**2.5 Amps Maximum Total Load** (All terminals combined)

### Anticipation:

Heating 4 to 40

Cooling 4 to 40

Auxiliary 4 to 40

} **Reference Values**

## STAGING DATA

Up to three heating stages

Up to two cooling stages

## THERMAL DATA

### Setpoint Temperature Range:

40°F to 99°F (4°C to 37°C)

### Operating Ambient Temperature Range:

32°F to 105°F

### Operating Humidity Range:

0 to 90% RH (non-condensing)

### Shipping Temperature Range:

-40°F to 150°F

## ACCESSORIES

Remote Sense Kit W. R. Part No. F145-1049

Thermostat Guard W. R. Part No. F29-0198 (clear) or

F29-0238 (opaque)

# INSTALLATION

## NEW INSTALLATION

**YOU SHOULD PROGRAM THE THERMOSTAT WITH BATTERY INSTALLED BEFORE ATTACHING ON SUBBASE. SEE OPERATION GUIDE FOR PROGRAMMING INSTRUCTIONS.**

### SELECT THERMOSTAT LOCATION


Proper location insures that the thermostat will provide a comfortable building temperature. Observe the following general rules when selecting a location:

1. Locate thermostat about 5 ft. above the floor.
2. Install thermostat on a partitioning wall, not on an outside wall.
3. Never expose thermostat to direct light from lamps, sun, fireplaces or any temperature radiating equipment.
4. Avoid locations close to windows, adjoining outside walls, or doors that lead outside.
5. Avoid locations close to air registers or in the direct path of air from them.
6. Make sure there are no pipes or duct work in that part of the wall chosen for the thermostat location.
7. Never locate thermostat in a room that normally warmer or cooler than the rest of the building.
8. Avoid locations with poor air circulation, such as behind doors or in alcoves.

## ROUTE WIRES TO LOCATION

All wiring must conform with local and national electrical codes and ordinances.

1. Probe for obstructions in partition before drilling  $\frac{1}{2}$ " hole in wall at selected location. Take up quarter round and drill a small guide hole for sighting (see fig. 1). From basement, drill  $\frac{3}{4}$ " hole in partition floor next to guide hole. In buildings without basements, drill  $\frac{1}{2}$ " hole through ceiling and into partition from above (see fig. 1).
2. Through this hole drop a light chain, or 6" chain attached to a strong cord. Snag cord in basement with hooked wire. In buildings without basements, drop cord through hole in ceiling and down partitioning; snag cord at the thermostat location.
3. Attach thermostat wires to cord and pull wires through hole in wall so that 6" of wire protrudes.

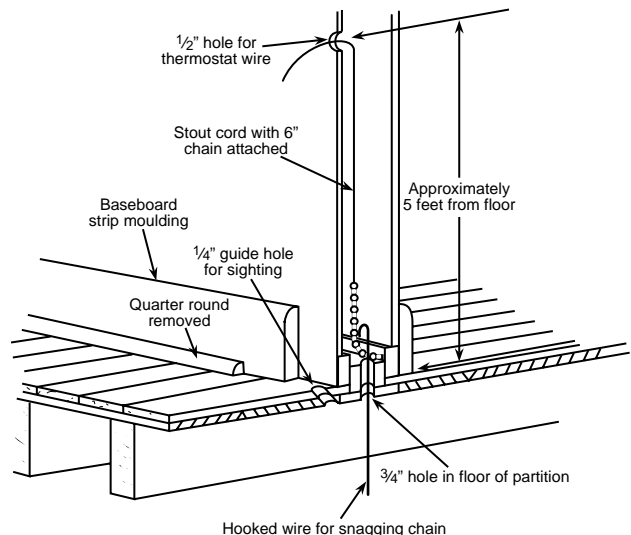

**Figure 1. Routing thermostat wires**

# REPLACEMENT INSTALLATION

## REMOVE OLD THERMOSTAT

1. Shut off electricity at the main fuse box until installation is complete. Verify power is off with a voltmeter.
2. Remove the front cover of the old thermostat. **With wires still attached**, remove wall plate from the wall.
3. If the old thermostat has a wall mounting plate, remove the thermostat and the wall mounting plate as an assembly.
4. Use the Cross Reference Guide to find the thermostat type you are replacing.
5. **Identify each wire attached to the old thermostat using the labels enclosed with the new thermostat. Record the identification of the wire on the corresponding blank in Table 2.**
6. Disconnect the wires from old thermostat one at a time. Pull at **least 6 inches** of wire out of the wall. **DO NOT LET WIRES FALL BACK INTO THE WALL.**
7. Install new thermostat using the following procedures.

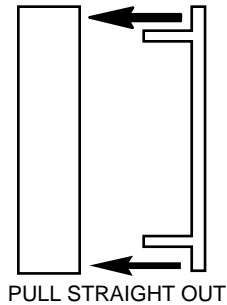


Figure 2. Removing thermostat from subbase

TABLE 1. WIRE IDENTIFICATION LABELS

1 G	2 C	3 L	4 R	5 O	6 B	7 E1	8 E2
G 1	C 2	L 3	R 4	O 5	B 6	E1 7	E2 8
9 Y1	10 Y2	11 W1	12 W2	13 W3	14 S1	15 S2	16 S3
Y1 9	Y2 10	W1 11	W2 12	W3 13	S1 14	S2 15	S3 16

## ATTACH SUBBASE TO WALL

1. Remove the packing material from the thermostat. Place the fingers of one hand on the center top and bottom portion of the thermostat. Grasp the subbase in the other hand on the top and bottom center, and gently pull straight out (see fig. 2). The thermostat has pin and socket connectors. Forcing or prying on the thermostat will cause damage to the unit.

### NOTE

THIS THERMOSTAT REQUIRES BOTH THE HOT AND COMMON SIDES OF THE 24 VAC TRANSFORMER TO BE PRESENT TO THE THERMOSTAT FOR OPERATION.

TABLE 2. TERMINAL REFERENCE

LABEL NUMBER	NEW THERMOSTAT TERMINAL DESIGNATION	FUNCTION	OLD THERMOSTAT TERMINAL DESIGNATION
(1)	G	Fan Output	_____
(2)	C	Transformer 24 VAC Common	_____
(3)	L	Malfunction Light	_____
(4)	R	Transformer 24 VAC Hot	_____
(5)	O	Changeover Output (cool)	_____
(6)	B	Changeover Output (hot)	_____
(7)	E1	Emergency Heat Relay (cycles on first stage in emergency mode)	_____
(8)	E2	Emergency Heat Relay (continually energized in emergency mode)	_____
(9)	Y1	Stage 1 Cool	_____
(10)	Y2	Stage 2 Cool	_____
(11)	W1	Stage 1 Heat (compressor)	_____
(12)	W2	Stage 2 Heat (compressor)	_____
(13)	W3	Stage 3 Heat (auxiliary)	_____

2. Connect wires beneath terminal screws on subbase using appropriate wiring schematic (see figs. 3 through 6).
3. Place subbase over hole in wall and mark mounting hole locations on wall using subbase as a template.
4. Move subbase out of the way. Drill mounting holes.
5. Fasten subbase loosely to wall, as shown in fig. 3, using two mounting screws. Place a level against bottom of subbase, adjust until level, and then tighten screws. (Leveling is for appearance only and will not affect thermostat operation.) If you are using existing mounting holes, or if holes drilled are too large and do not allow you to tighten subbase snugly, use plastic screw anchors to secure subbase.
6. Push excess wire into wall and plug hole with a fire-resistant material (such as fiberglass insulation) to prevent drafts from affecting thermostat operation.

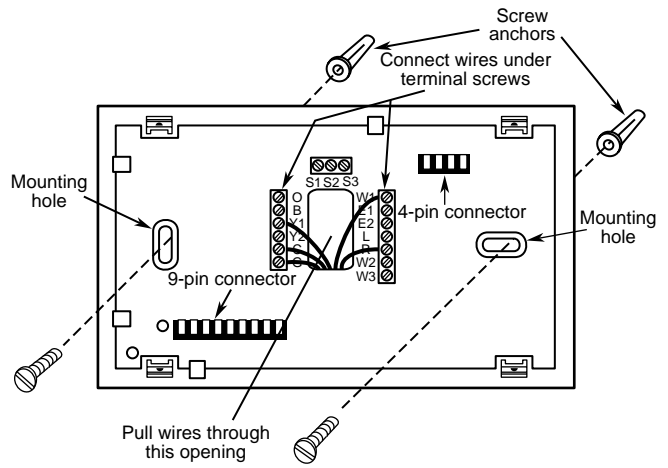


Figure 3. Subbase

**⚠ WARNING**

DO NOT EXCEED MAXIMUM VOLTAGE OR CURRENT RATINGS. FIRE, PERSONAL INJURY, AND/OR EQUIPMENT DAMAGE COULD RESULT.

**⚠ CAUTION**

To prevent electrical shock and/or equipment damage, disconnect electrical power at the main fuse box until installation is complete. Verify power is off with a voltmeter.

**NOTE**

The following wiring diagram shows typical terminal identification and wiring. For proper installation, refer to the original manufacturers' instructions.

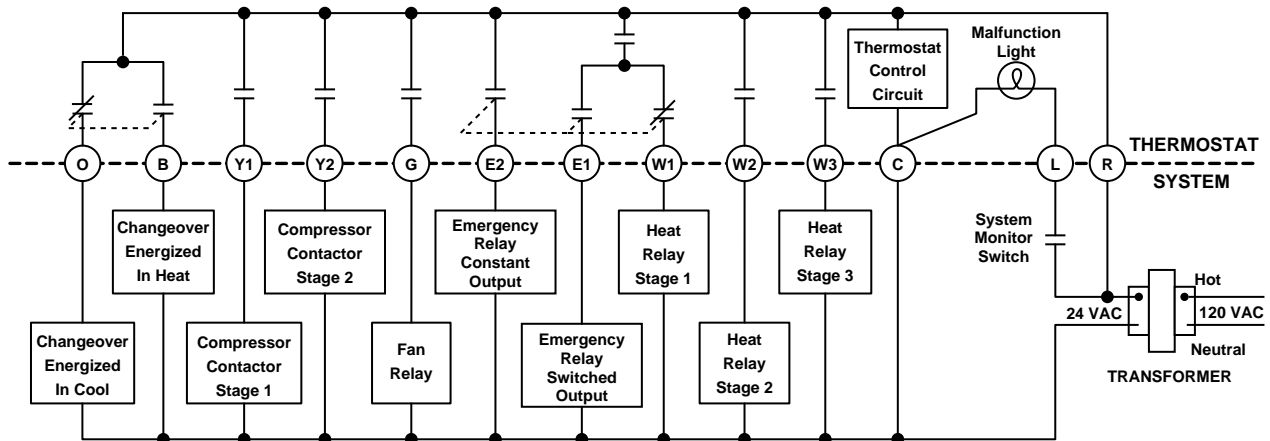


Figure 4. Typical wiring diagram for single transformer systems

**NOTE**

IF SAFETY CIRCUITS ARE IN ONLY ONE OF THE SYSTEMS, REMOVE THE TRANSFORMER OF THE SYSTEM WITH **NO** SAFETY CIRCUITS.

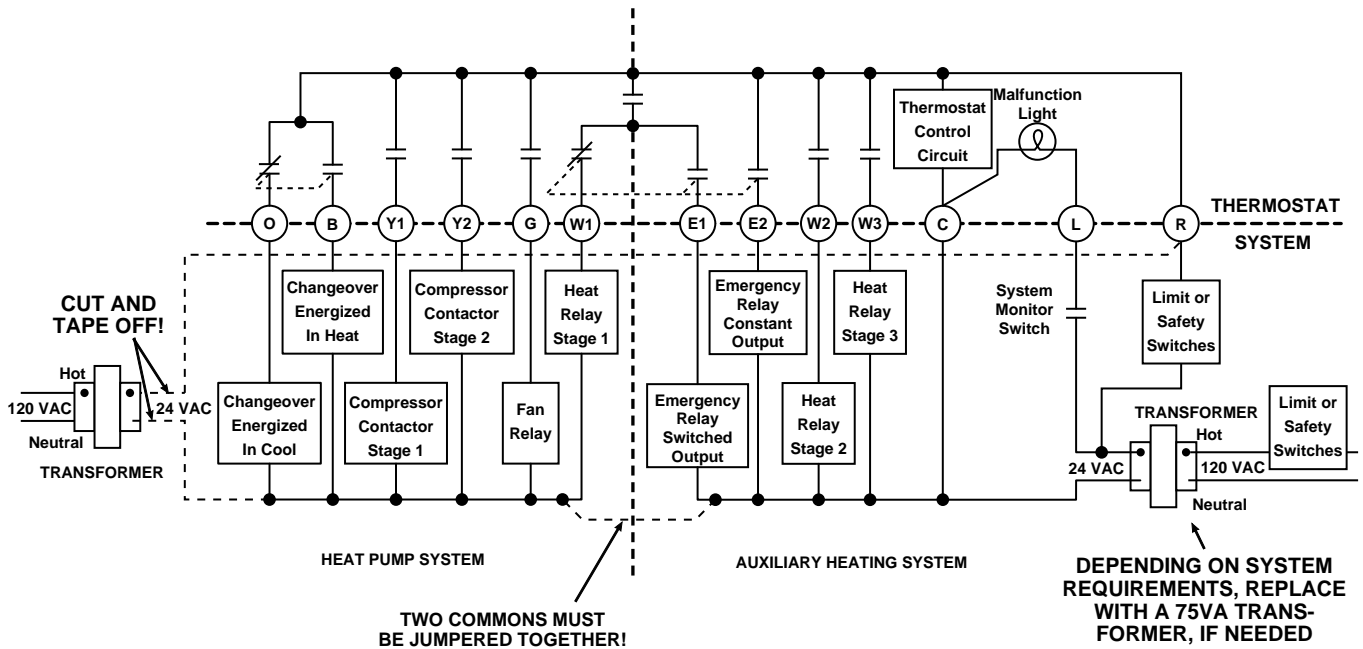


Figure 5. Typical wiring diagram for two-transformer system with NO safety circuits

**NOTE**

Relay contacts shown are thermostatically operated. The accessory relay scheme is required when safety circuits exist in both systems.

**CAUTION**

Polarity must be observed. If the HOT side of the second transformer is jumpered to the COMMON side of the first transformer, a short will be made. Damage to equipment will occur when power is restored.

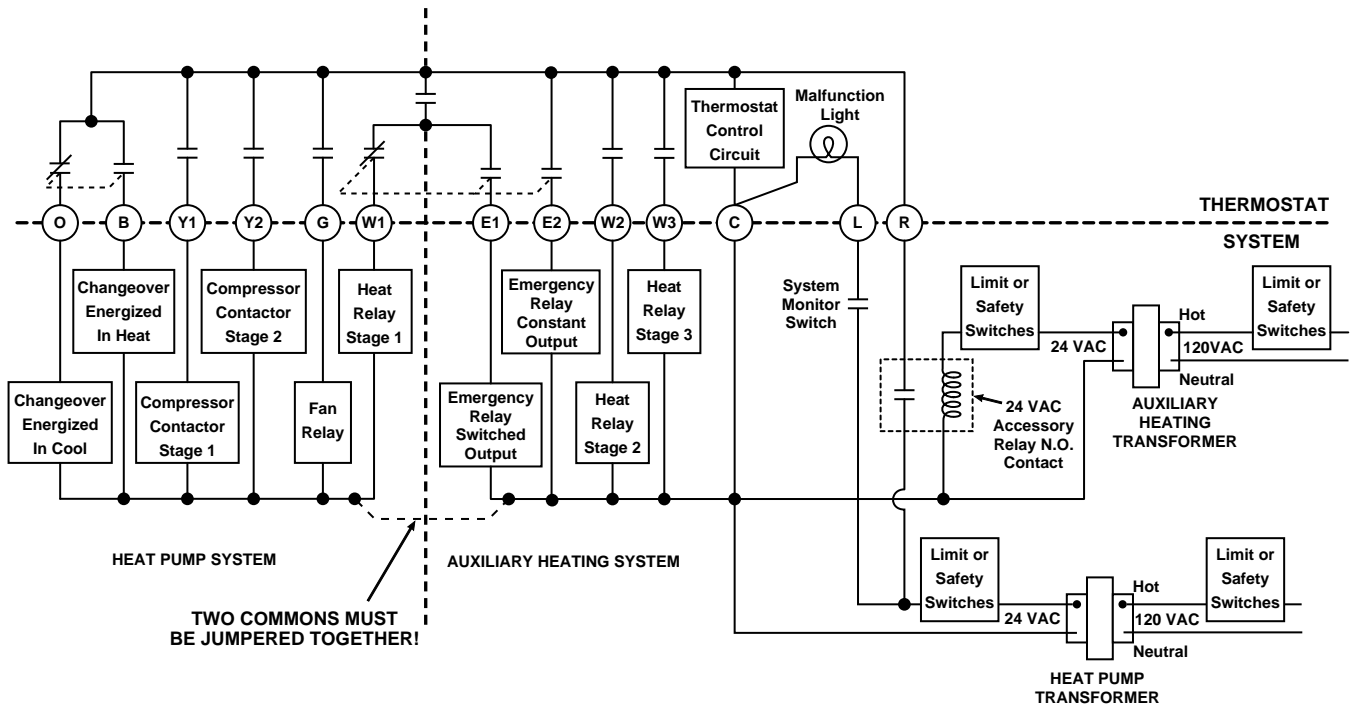


Figure 6. Typical wiring diagram for two-transformer system with safety circuits in BOTH systems


## ATTACH THERMOSTAT TO SUBBASE

WE RECOMMEND THAT YOU SET OPTION SWITCHES TO DESIRED POSITION BEFORE ATTACHING ON SUBBASE (see OPERATION). WE ALSO RECOMMEND THAT YOU PROGRAM THE THERMOSTAT WITH BATTERY INSTALLED BEFORE ATTACHING ON SUBBASE (see OPERATION GUIDE for programming instructions).

POWER TO THERMOSTAT MUST BE OFF BEFORE ATTACHING THERMOSTAT TO WALL. FAILURE TO TURN OFF POWER BEFORE ATTACHING THERMOSTAT MAY CAUSE EQUIPMENT DAMAGE DUE TO RAPID COMPRESSOR CYCLING.

To attach thermostat to subbase, line up the plastic snap guides at the top of the thermostat and the 4 connector pins on the thermostat with the connectors near the top right section of the subbase (when viewed from the front). Gently pivot the thermostat down until the 9-pin connector

and the plastic snaps lock into place (see fig. 7). **Be gentle when attaching thermostat.** If the thermostat does not seem to be attaching to the subbase easily, make sure that the connector pins and plastic snaps are properly aligned, and that excess wire is pushed into the wall. **Damage to the thermostat may occur if force is used.**

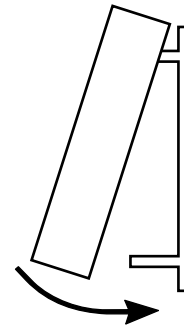

ENGAGE TWO UPPER GUIDES;  
PIVOT DOWN

Figure 7. Attaching thermostat to subbase

## OPERATION


### SYSTEM CONFIGURATION

#### NOTE


ANY TIME OPTION SWITCHES #1, #2, OR #4 ARE CHANGED, THE 9 VOLT BATTERY MUST BE REMOVED FOR A MINIMUM OF 2 MINUTES. DO NOT REMOVE THE BATTERY WHEN CHANGING OPTION SWITCH #3.

#### SET OPTION SWITCHES


1. **Single Stage Compressor Heat Pump System** — with reversing valve energized through **B** or **O** terminals

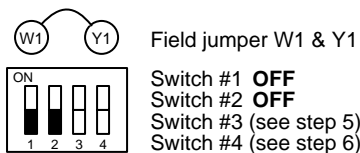


2. **Two Compressor (Split) or Two Speed Compressor System**

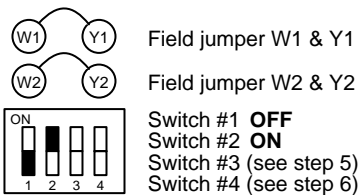

 3. **Multi-stage System with Electric Auxiliary Heating System** — up to 3 heat stages and 2 cool stages



 4. **Multi-stage System** — up to 3 heat stages and 2 cool stages




5. **Keypad Lockout**

#### NOTE


Option switches #1, #2, and #4 should be changed (if required), programming should be completed, and battery should be installed **before** changing option switch #3.



 Figure 8. Back of thermostat



## 6. Automatic Changeover from Heat to Cool

 

Switch #1 (see steps 1-4)  
Switch #2 (see steps 1-4)  
Switch #3 (see step 5)  
Switch #4 **ON**



The battery maintains the stored program in the event of a power failure. When attached to the wall with 24 VAC power applied, the thermostat will function normally without the battery. However, the program will be lost in the event of a power interruption or failure if the battery is **not** installed. When power is restored, the thermostat will automatically maintain a heating temperature of 64°F or a cooling temperature of 82°F (factory preprogrammed) as needed.

## CHECK THERMOSTAT OPERATION



### NOTE

When checking thermostat, option switch #4 for automatic changeover must be in the **OFF** position. This will allow temporary setting of heat setpoints above cool setpoints. After system checkout, reset option switch #4 to **ON** position if automatic changeover is desired (see **SET OPTION SWITCHES**).

### FAN OPERATION

1. Turn on power to the system. If the auxiliary heat source has a standing pilot, be sure to light it.
2. Press  until **FAN ON** is displayed. The blower should begin to operate.
3. Press  until **FAN AUTO** is displayed. The blower should stop operating within approximately one minute.



### HEATING SYSTEM OPERATION

1. Press  until **HEAT** is displayed (it may already be displayed).
2. Press  to adjust thermostat to 99°F. All stages of the heating system should begin to operate within approximately five minutes. However, if the PUMP LED is flashing, the compressor lockout feature is operating (see **Lockout Bypass Option** to temporarily override the compressor lockout feature during testing).



## COOLING SYSTEM OPERATION

### CAUTION

To prevent compressor and/or property damage, if power to the compressor has been off or interrupted for more than 1 hour and the outdoor temperature is below 50°F, **DO NOT** operate the system for at least the amount of time the compressor was off! This will allow the compressor heaters to warm the compressor oils to avoid damage due to slugging.

1. Press  until **COOL** is displayed.
2. Press  to adjust thermostat to 40°F. All stages of the cooling system should begin to operate within approximately five minutes. However, if the PUMP LED is flashing, the compressor lockout feature is operating (see **Lockout Bypass Option** to temporarily override the compressor lockout feature during testing).

### EMERGENCY MODE OPERATION

 
1. Press  until **EMER** is displayed. The red EMER LED should be lit continuously (non-flashing), regardless of system cycling.
2. Press  to adjust thermostat about 5°F above room temperature. Any systems (such as electric strip heaters, fossil fuel systems, etc.) that are wired or jumpered to the emergency circuit (thermostat terminal E1) should begin to cycle.


(Instructions continue on next page.)

### LOCKOUT BYPASS OPTION

**FOR QUALIFIED SERVICE TECHNICIANS' USE ONLY. OPERATORS SHOULD NOT USE THIS FEATURE DUE TO POSSIBILITY OF EQUIPMENT OR PROPERTY DAMAGE, OR PERSONAL INJURY.**

### COMPRESSOR SHORT TERM CYCLE PROTECTION

 This thermostat has a built-in short term (5-minute) time delay. During this 5-minute period, the thermostat will lock out the compressor to allow head pressure to stabilize. If you want to override this feature while testing thermostat operation, simply press 

and  buttons at the same time at initial startup.

**DO NOT USE THE LOCKOUT BYPASS OPTION UNLESS THE COMPRESSOR OIL HEATERS HAVE BEEN OPERATIONAL FOR 6 HOURS AND THE SYSTEM HAS NOT BEEN OPERATIONAL FOR AT LEAST 5 MINUTES.**

After the system has been checked and is running properly, determine if automatic changeover is desired (see **SYSTEM CONFIGURATION**).

Refer to the **OPERATION GUIDE** if you need additional information on thermostat operation.

## **TROUBLESHOOTING**

Refer to the **Question & Answer** section of the **OPERATION GUIDE** for information on troubleshooting the thermostat.

---

If you need further information about this product, please write to

White-Rodgers Division, Emerson Electric Co.  
9797 Reavis Road  
St. Louis, MO 63123-5398  
Attention: Technical Service Department

---